Groundwater and Drinking Water Education Program Green County

Kevin Masarik
Center for Watershed Science and Education







Today's presentation


- Groundwater Basics: Where does my water come from
- Well Construction
- What do my individual test results mean?
- General groundwater quality in Green County
- Improving your water quality




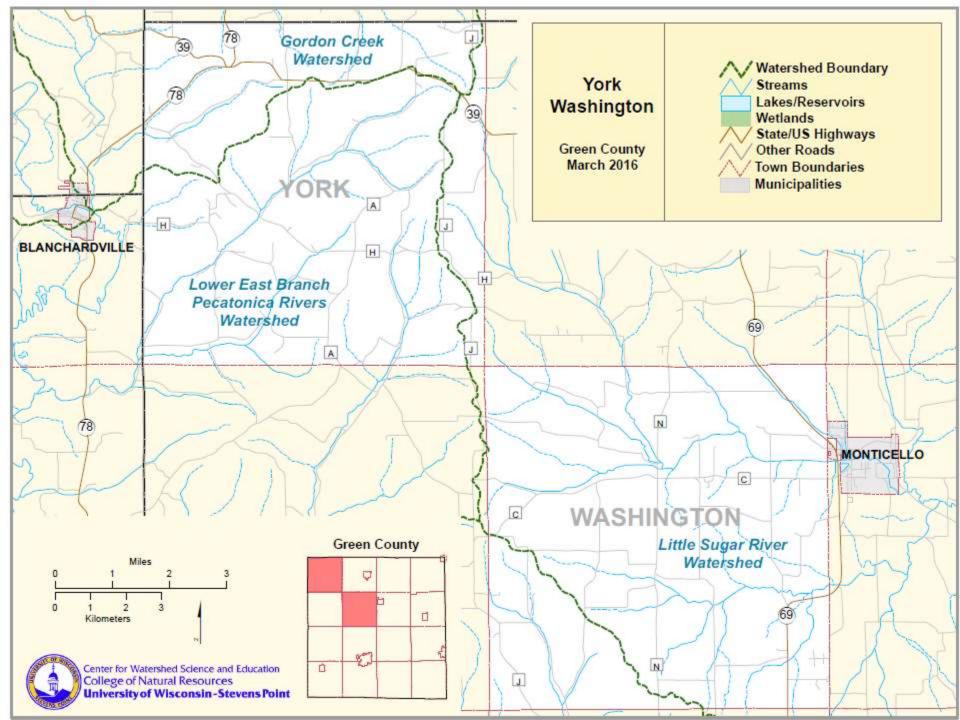


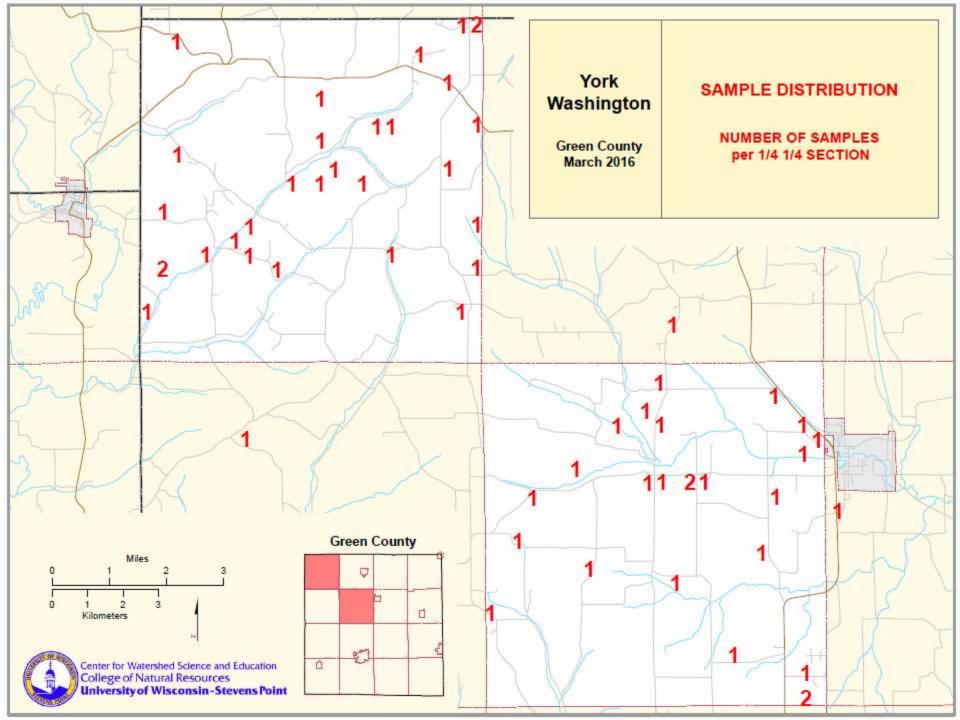

Groundwater Movement

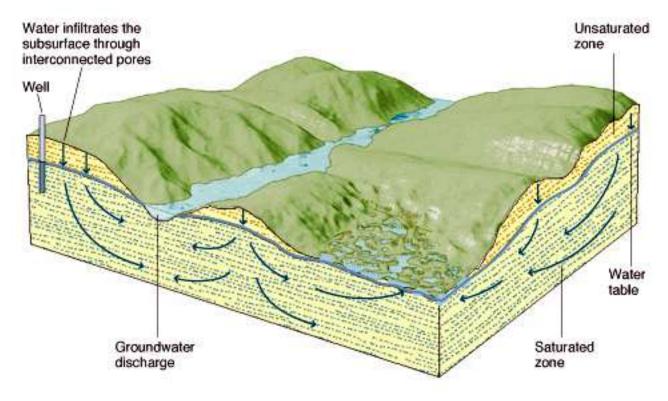

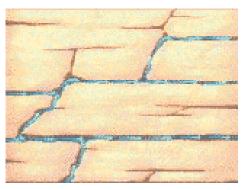

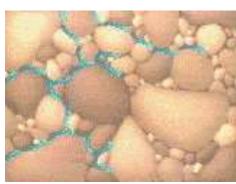

Groundwater Basics: Where does my water come from? How does your water quality compare? Look for data in your area

Learn about well construction

Crystalline bedrock

Interpret my water test results

How to improve my water quality

Who to contact if I need additional assistance



What is Groundwater?

Watersheds of Wisconsin

Aquifers: Our groundwater storage units


Factors that affect groundwater quality

Better Homes and Groundwater


Aquifers: Our groundwater storage units

Aquifers are geologic formations that store and transmit groundwater.

The aquifer properties determine how quickly groundwater flows, how much water an aquifer can hold and how easily groundwater can become contaminated. Some aquifers may also contain naturally occurring elements that make water unsafe.

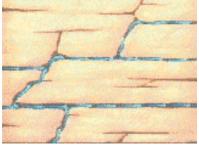

Water and contaminants can move quickly through cracks and fractures.

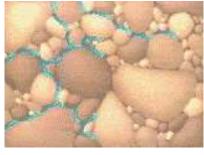

Water moving through tiny spaces in between sand particles or sandstone moves slower and allows for filtration of some contaminants.

Eastern

Dolomite

↑ Youngest

Oldest


Diagram courtesy of WGNHS


Wisconsin's geology is like a layered cake. Underneath all of Wisconsin lies the Crystalline bedrock which does not hold much water. Think of this layer like the foundation of your house. All groundwater sits on top of this foundation. Groundwater is stored in the various sandstone, dolomite and sand/gravel aquifers above the crystalline bedrock layer. The layers are arranged in the order which they formed, oldest on the bottom and youngest on top.

Sand and gravel

Sandstones and dolomite


Learn more about Wisconsin's geologic past by clicking the aquifer names

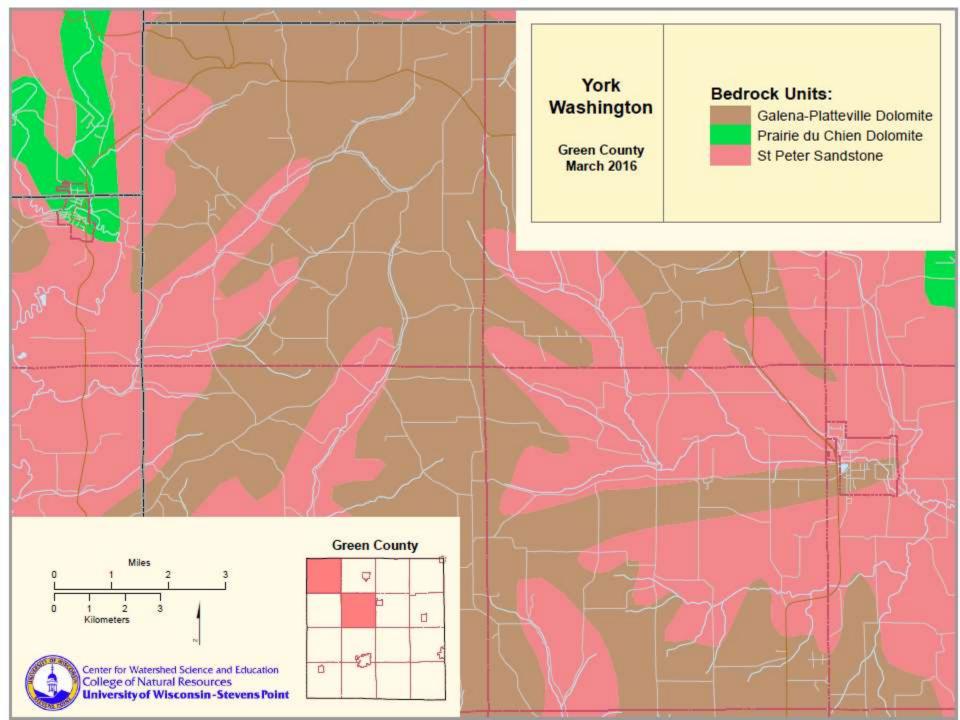

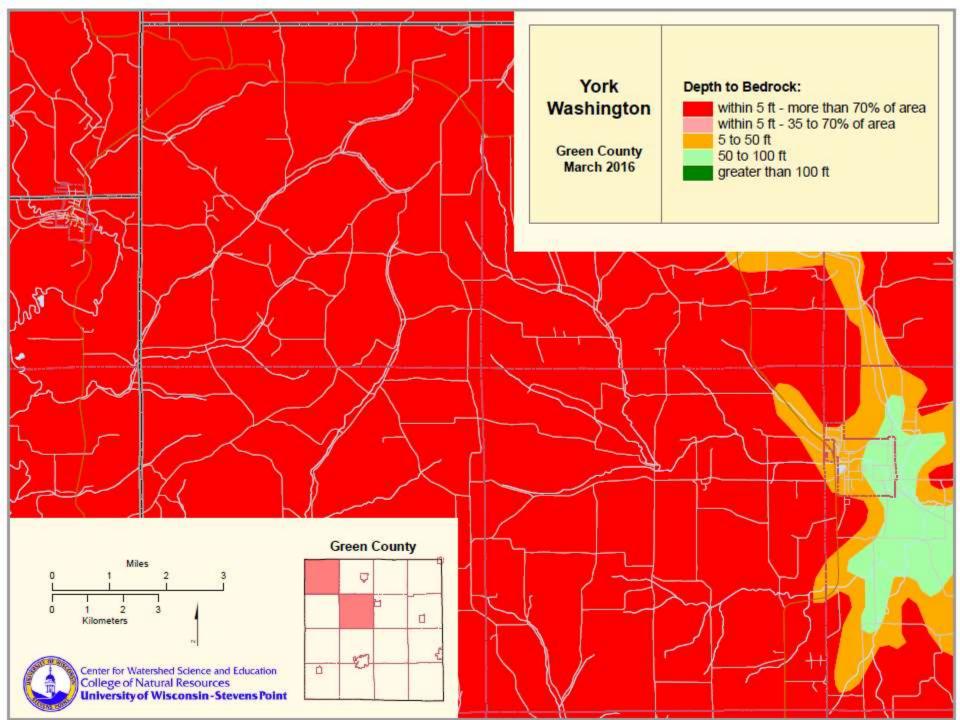

water basics

- > "Universal Solvent"
- ➤ Naturally has "stuff" dissolved in it.
 - Impurities depend on rocks, minerals, land-use, plumbing, packaging, and other materials that water comes in contact with.
- Can also treat water to take "stuff" out

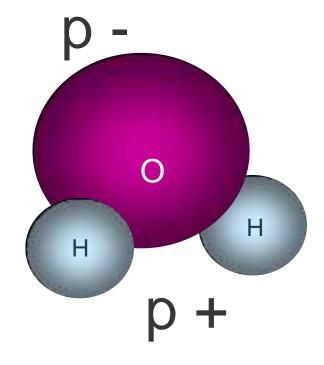

Interpreting Drinking Water Test Results

Tests important to health:

- Bacteria
- Sodium
- Nitrate
- Copper
- Lead
- Triazine
- Zinc
- Sulfate
- Arsenic

Tests for aesthetic (taste,color,odor) problems:

- Hardness
- Iron
- Manganese
- Chloride

Other important indicator tests:

- Saturation Index
- Alkalinity
- Conductivity
- Potassium

Red = human-influenced Blue = naturally found

Health Concern Categories

Acute Effects

 Usually seen within a short time after exposure to a particular contaminant or substance.

(ex. Bacteria or viral contamination which may cause intestinal disease)

Chronic Effects

- Result from exposure to a substance over a long period of time.
- Increase risk of developing health complications later in life.


(ex. Arsenic or pesticides can increase the risk of developing certain cancers)



Chronic related health concerns are generally about risk management

National Cancer Risk Factors with Percentages



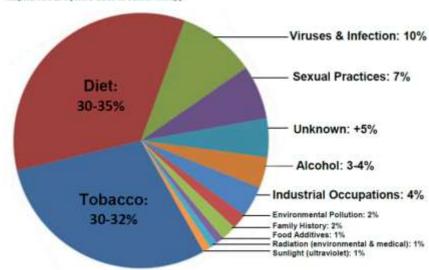

Being struck by lightning	0.16 in 1,000 chance.	
0.010 mg/L of arsenic in drinking water.	3 out of 1,000 people likely to develop cancer.	
2 pCi of indoor radon level.	4 out of 1,000 people likely to develop lung cancer.1	
2 pCi of indoor radon combined with smoking.	32 out of 1,000 people could develop lung cancer.1	

Drinking water quality is only one part of an individual's total risk.

Private vs. Public Water Supplies

Public Water Supplies

 Regularly tested and regulated by drinking water standards.

Private Wells

- Not required to be regularly tested.
- Not required to take corrective action
- Owners must take special precautions to ensure safe drinking water.



Why do people test their water?

- Installed a new well
- Change in taste or odor
- Buying or selling their home
- Plumbing issues
- Want to know if it's safe to drink.



Coliform bacteria

- Generally do not cause illness, but indicate a pathway for potentially harmful microorganisms to enter your water supply.
 - Harmful bacteria and viruses can cause gastrointestinal disease, cholera, hepatitis
- Well Code: "Properly constructed well should be able to provide bacteria free water continuously without the need for treatment"
- Recommend using an alternative source of water until a test indicates your well is absent of coliform bacteria
- Sources:
 - Live in soils and on vegetation
 - Human and animal waste
 - Sampling error



Greater than or equal to 1

Present = Unsafe

Zero bacteria

Absent = Safe

If coliform bacteria was detected, we also checked for e.coli bacteria test


- Confirmation that bacteria originated from a human or animal fecal source.
- E. coli are often present with harmful bacteria, viruses and parasites that can cause serious gastrointestinal illnesses.
- Any detectable level of E.coli means your water is unsafe to drink.

Contaminants	Sources	Symptoms
BACTERIA		
Escherichia coliform (E. coli) Salmonella Campylobacter E. coli 0157 (Requires a special water test for detection. Causes similar, but more serious illness than other E.coli strains. Requires medical treatment.)	Infected human and animal feces Manure Septic systems Sewage	Gastrointestinal illness Low-grade fever Begins 12 hrs - 7 days after exposure
Leptosporidia MICROSCOPIC PARASITES	Urine of livestock, dogs and wildlife Manure	High fever, severe headache and red eyes Gastrointestinal illness Begins 2-28 days after exposure
Cryptosporidia Giardia	Infected human and animal feces Manure Septic systems Sewage	Gastrointestinal illness Begins 2-14 days after exposure
VIRUSES Norovirus CHEMICALS	Infected human feces and vomit Septic systems Sewage	Gastrointestinal illness Low-grade fever & headache Begins 12-48 hrs after exposure
Nitrate	FertilizersManureBio-solidsSeptic systems	Methemoglobinemia or "Blue Baby Syndrome" - No documented cases in Door County, but elevated nitrate levels in well water may indicate risk of contamination by additional pathogens.
Atrazine (trade-name herbicide for control of broadleaf and grassy weeds)	Estimated to be most heavily used herbicide in the U.S. in 1987/89, with its most extensive use for corn and soybeans in the Midwest, including WI. In 1993, it became a restricted-use herbicide nationally. U.S. EPA set a max. contaminant level (MCL) at 3 parts per billion for safe drinking water.	Short-term exposure above the MCL may cause: congestion of heart, lungs and kidneys; low blood pressure; muscle spasms; weight loss; damage to adrenal glands. Long-term exposure above MCL may cause: weight loss, cardiovascular damage, retinal and some muscle degeneration; cancer.

Some Common Pathways for Bacteria to Enter Your Water System



AQUIFER CONTAMINATION THROUGH IMPROPERLY ABANDONED WELLS

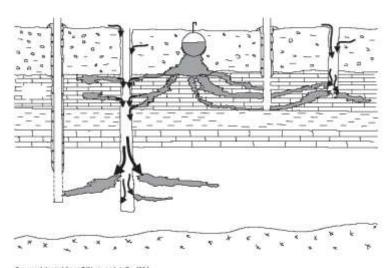

Source: Adapted from DiNovo and Jaffe, 1994.

Comm 82-80(8) nov2. Wiscomia Administrative Code problem the installation of a yard by dean with a below ground discharge. The code made

"Stop and waste-type control valves may not be installed underground."

This type of Bystraes, with a below ground discharge to popular because of the care of operation and the



below the time last. When the handle is alled water-inter the tree and flows flowing the beach, is disain at the same level is the planning allows where in the trees and the beach to drain each time the trees and the beach to drain each time the bandle is however. This declarate action prevents flowing to the properties or head to expand flowering being action prevent, and thereing to the terms of head to expand so the factories. If a house commerced to the factories without a form commerced to the factories of the house of the planning to the planning of the house south the right-and towards the down part and could commence the general each of and water and commence to the general each of some of action of the planning and action of some or action of the planning and action of the each of the characteristics of the house of and could be explained through the down part If you have further questions, pieces check the Constients website at: Alguitommerce et poi/156/08 PlunbingProgram, html

an conduct your local phyrolong inspector

or , contact one of the considers killed



Tan byon

- Planetta; eini 215-0117 / eini 261-1414 713-140-3387 / eini 283-3413
- Total Researt 713, 540-73877 (68-2); 7-815 Don Orenne Tris Sin, 2607 (68-2); 7-815 Don House Tris Sin, 2607 (68-2); 7-815 Epon Books 68-4(2-8900 (68-2); 7-848

SHOUNDS

What does an approved yard hydrant look like?



There's no "one" mover for a code-complian yard hydrom. Many number-berries per-hare models that are voice compliane. When you hay a hydrom, make most that it has an approved home commodies to accombreaker and does not include an orderground doors.

And if you tested a bose commention to come breaker on a yord hydrast reality over you become it during the winter to particular feacing conditions force branking the brokens.

If you find a result that you have questions about, contact the department or your houd plainting inspector

Well



What should I do if coliform bacteria was present?

- 1. Use alternative source of water for drinking
- 2. Retest
- 3. Try to identify any sanitary defects
 - Loose or non-existent well cap
 - Well construction faults
 - A nearby unused well or pit
 - Inadequate filtration by soil
- 4. Disinfect the well
- 5. Retest to ensure well is bacteria free.
- For reoccurring bacteria problems the best solution may be a new well or if new well is unlikely to remedy the problem because of geology, may seek approval for treatment.





Tests for Aesthetic Problems

Hardness

- Natural (rocks and soils)
- Primarily calcium and magnesium

 Problems: scaling, scum, use more detergent, decrease water heater efficiency

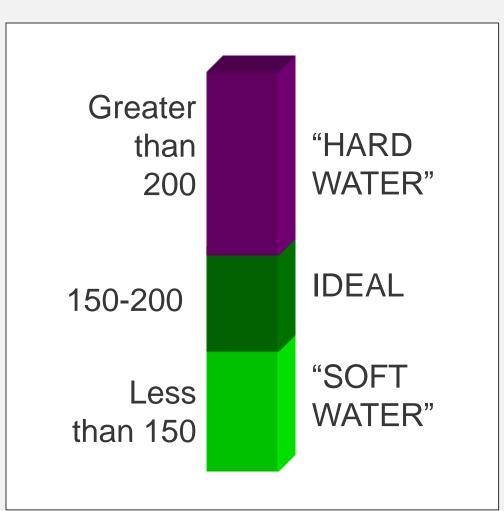


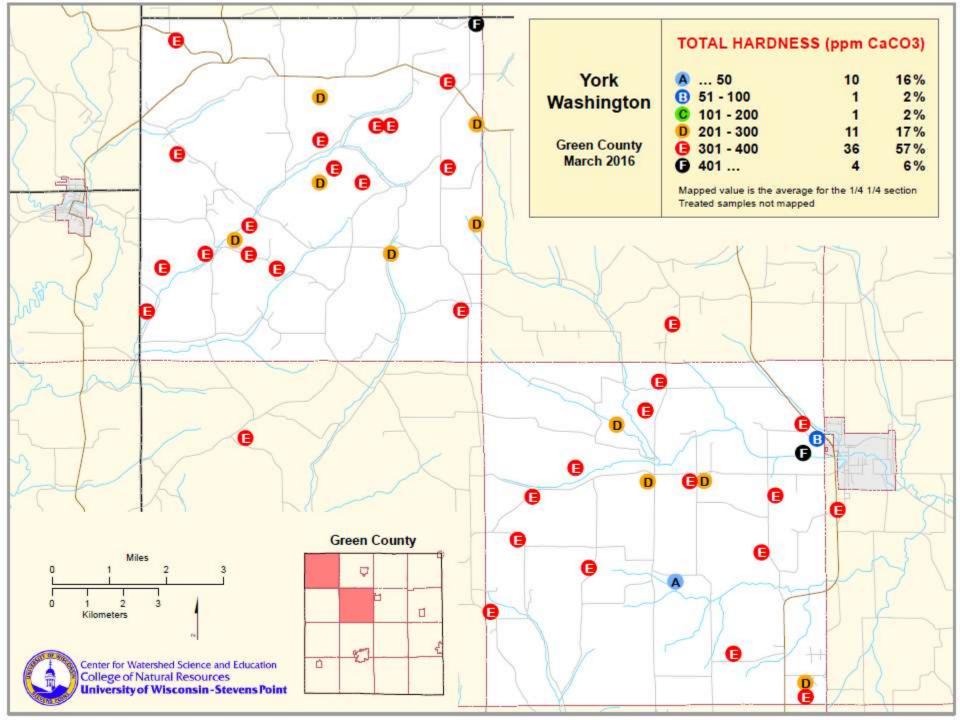

Water Softening


Water softeners remove calcium and magnesium which cause scaling and exchange it for sodium (or potassium).


- Negative: Increases sodium content of water.
- Suggestions:
 - Bypass your drinking water faucet.
 - Do not soften water for outdoor faucets.
 - If you are concerned about sodium levels – use potassium chloride softener salt.

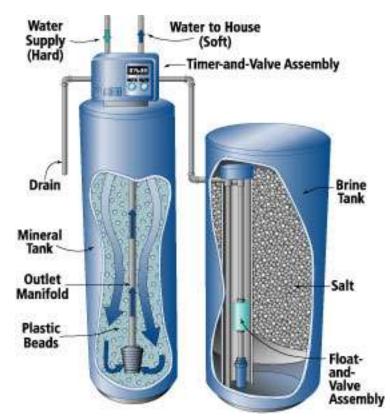


Tests for Overall Water Quality

- Alkalinity ability to neutralize acid
- Conductivity
 - Measure of total ions
 - can be used to indicate presence of contaminants (~ twice the hardness)
- pH Indicates water's acidity and helps determine if water will corrode plumbing



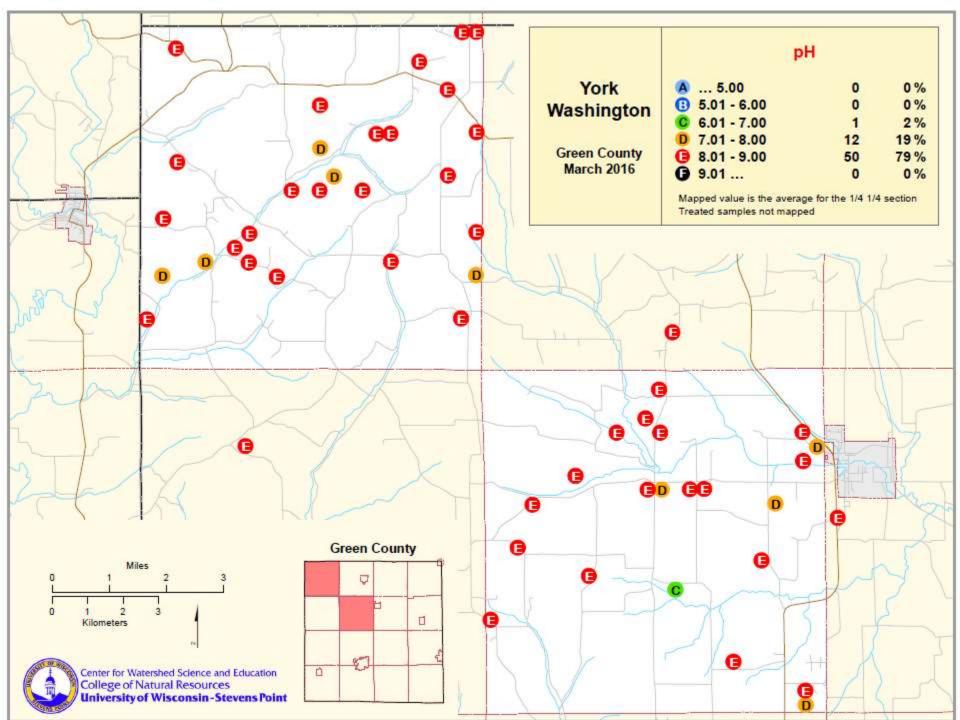

Tests for Overall Water Quality Saturation Index




Corrosion occurs



Scaling occurs





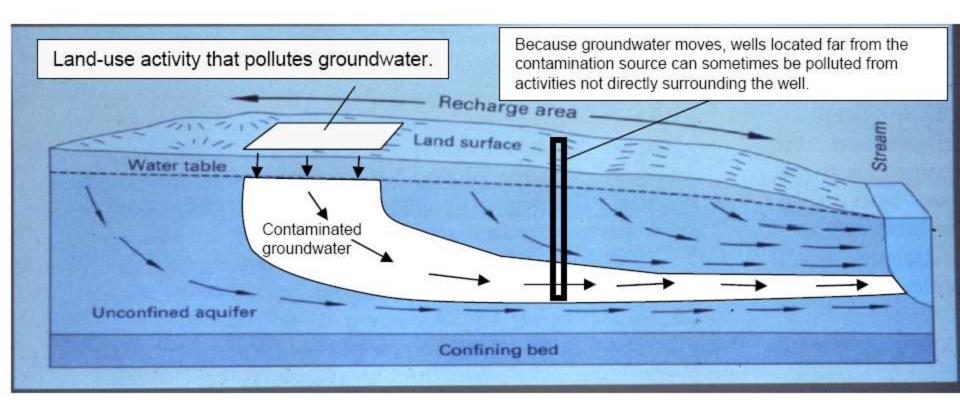

Nitrate-Nitrogen


Health Effects:

- Methemoglobinemia (blue baby disease)
- Possible links to birth defects and miscarriages (humans and livestock)
- Indicator of other contaminants

Sources:

- Agricultural fertilizer
- Lawn fertilizer
- Septic systems
- Animal wastes




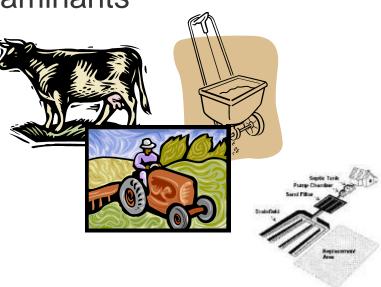



Test Important to Health

Nitrate Nitrogen

- Greater than 10 mg/L Exceeds State and Federal Limits for Drinking Water
- Between 2 and 10 mg/L
 Some Human Impact
- Less than 2.0 mg/L "Transitional"
- Less than 0.2 mg/L "Natural"

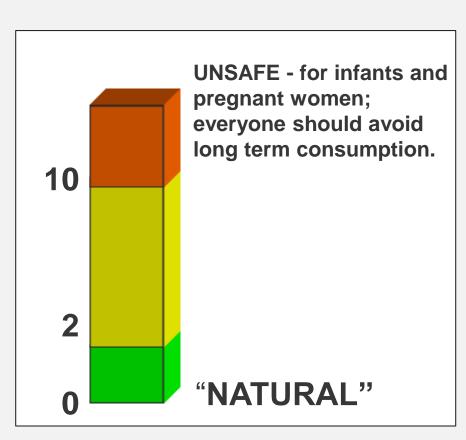

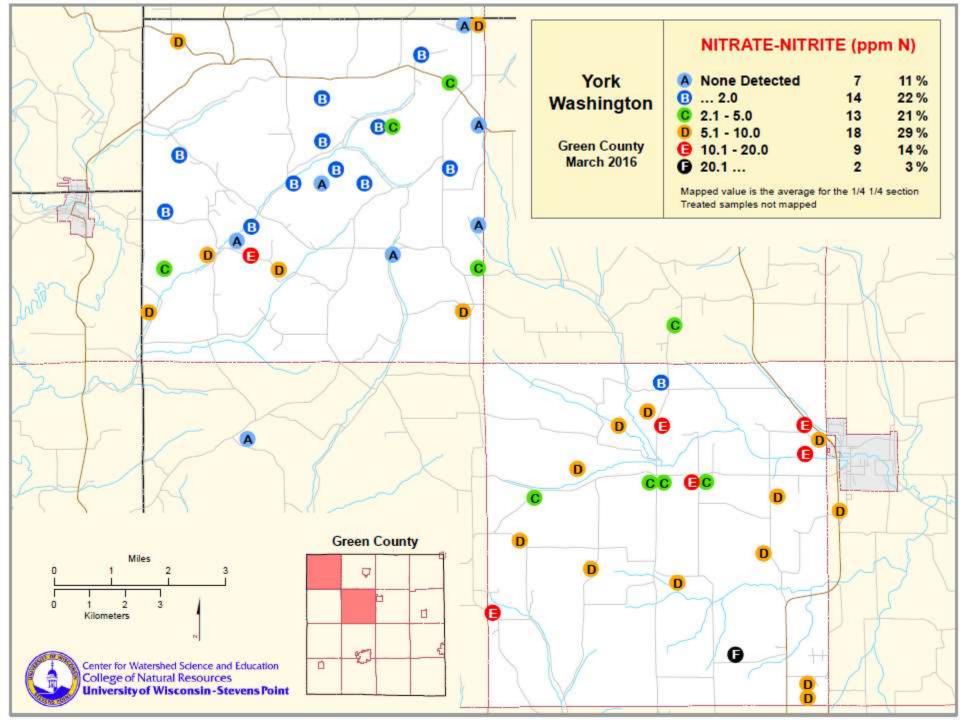

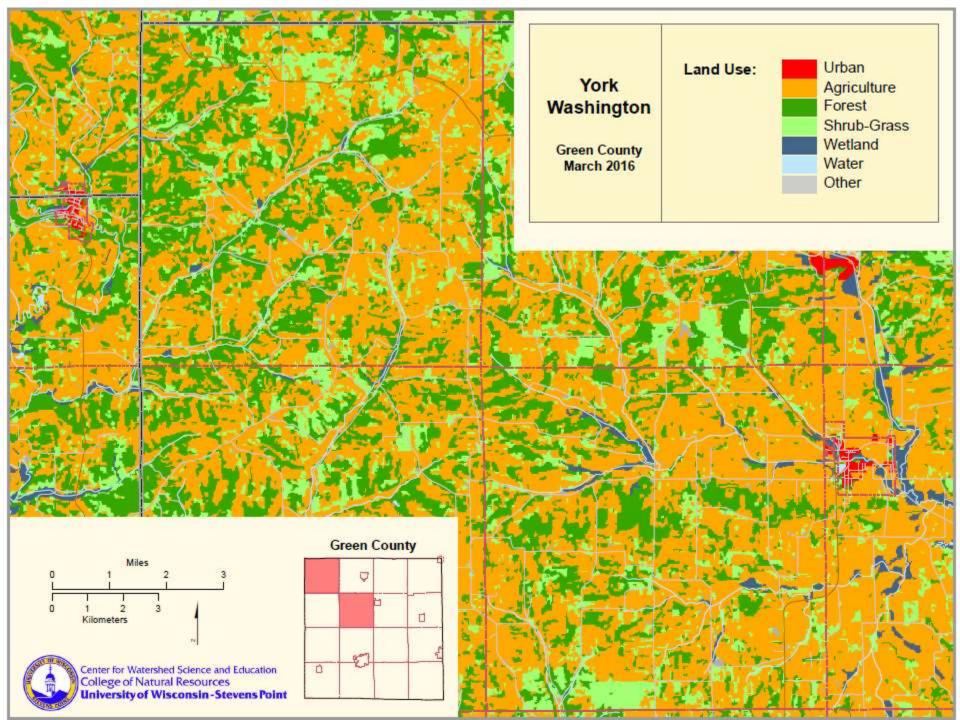

What can I do to reduce my nitrate levels?

Solution:

Eliminate contamination source or reduce nitrogen inputs

Short term:

- Change well depth or relocate well
- Carry or buy water
- Water treatment devices
 - Reverse osmosis
 - Distillation
 - Anion exchange


Tests for Aesthetic Problems

Chloride

- Greater than 250 mg/l
 - No direct effects on health
 - Salty taste
 - Exceeds recommended level
- Greater than 10 mg/l may indicate human impact
- Less than 10 mg/l considered "natural" in much of WI
- Sources: Fertilizers, Septic Systems and Road Salt

250 mg/l

Less than 10 mg/l

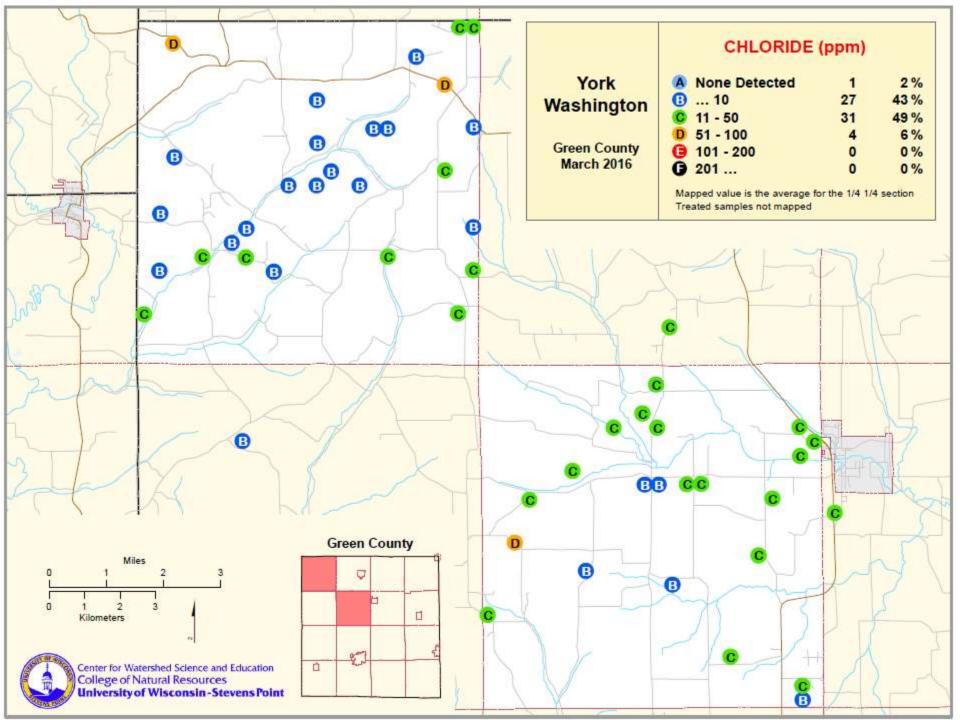

Test Important to Health

Arsenic


Sources: Naturally occurring in


mineral deposits

Standard: 0.010 mg/L (10 ppb)

Health Effects:

- Increased risk of skin cancers as well as lung, liver, bladder, kidney, and colon cancers.
- Circulatory disorders
- Stomach pain, nausea, diarrhea
- Unusual skin pigmentation

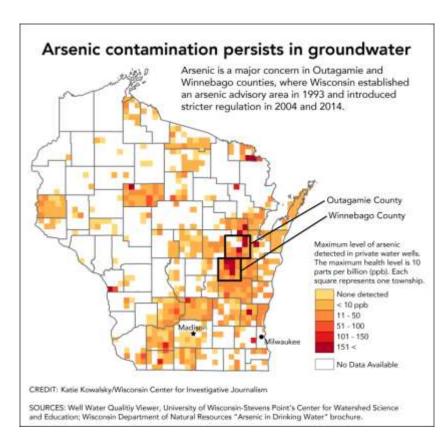

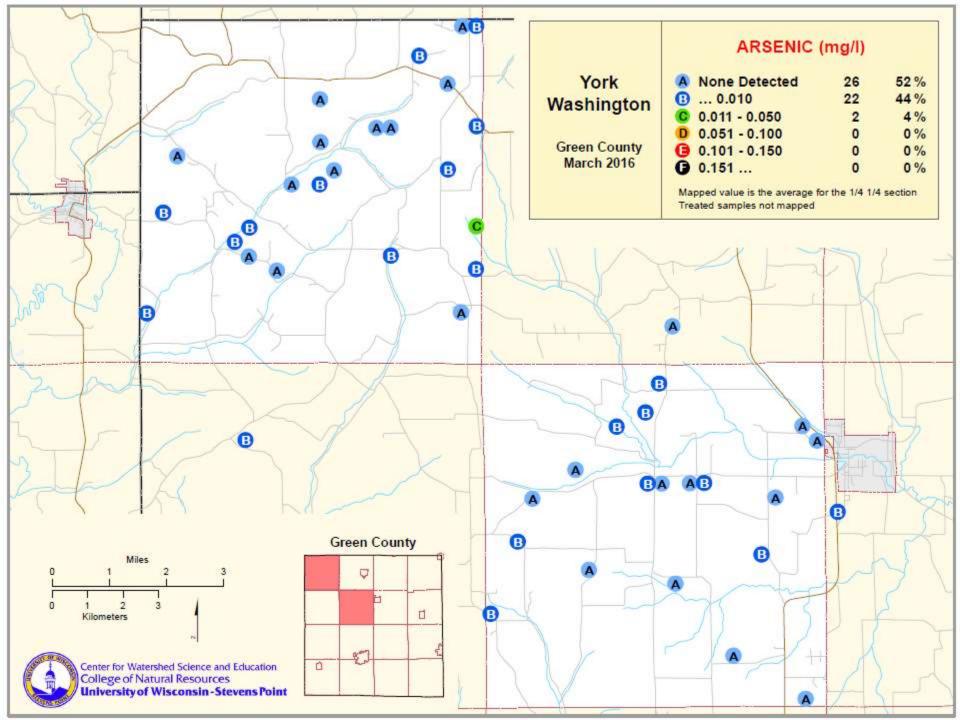

Tests for Aesthetic Problems

Iron

- Natural (rocks and soils)
- May benefit health
- Red and yellow stains on clothing, fixtures
- If iron present, increases potential for iron bacteria
 - · Slime, odor, oily film



Greater than 0.3 mg/L

Aesthetic problems likely

Less than 0.3 mg/L

Test Important to Health

Copper

- Sources: Copper water pipes
- Standard: Less than 1.3 mg/L is suitable for drinking



Health Effects:

- Some copper is needed for good health
- Too much may cause problems:
 - · Stomach cramps, diarrhea,
 - vomiting, nausea
 - · Formula intolerance in infants

Test Important to Health

Lead

Sources: Lead solder joining copper pipes (pre-1985) or brass fixtures

Standard: 0.015 mg/L (15 ppb)

Health Effects:

- Young children, infants and unborn children are particularly vulnerable.
- Lead may damage the brain, kidneys, nervous system, red blood cells, reproductive system.



Lead and Copper

Solutions:

 Allow water to run for a minute or two before using for drinking or cooking

or

 Use a treatment device, but generally not necessary



Pesticides in Drinking Water

- Pesticides include: insecticides, herbicides, fungicides and other substances used to control pests.
- Health standards usually only account for parent compound.
- Parent compounds breakdown over time.
- Little research into health effects from the combination of chemicals..



Most frequently detected pesticides in Wisconsin:

- Alachlor* and its chemical breakdown products
- Metolachlor and its chemical breakdown products
- Atrazine** and its chemical breakdown products
- Metribuzin
- · Cyanazine and its chemical breakdown products.

Tests Important to Health

DACT Screen

Sources: Triazine pesticides (mainly atrazine used on corn crops)


DACT Screen: Only measures the diaminochlorotriazine (DACT) residue levels of triazine type pesticides (atrazine, simazine, propazine, cyanazine, etc)

Specific to diaminochlorotriazine (DACT), does not account for parent compound or other breakdown components

Drinking water limit:

• **3 ppb of total atrazine** (atrazine + the 3 breakdown components)



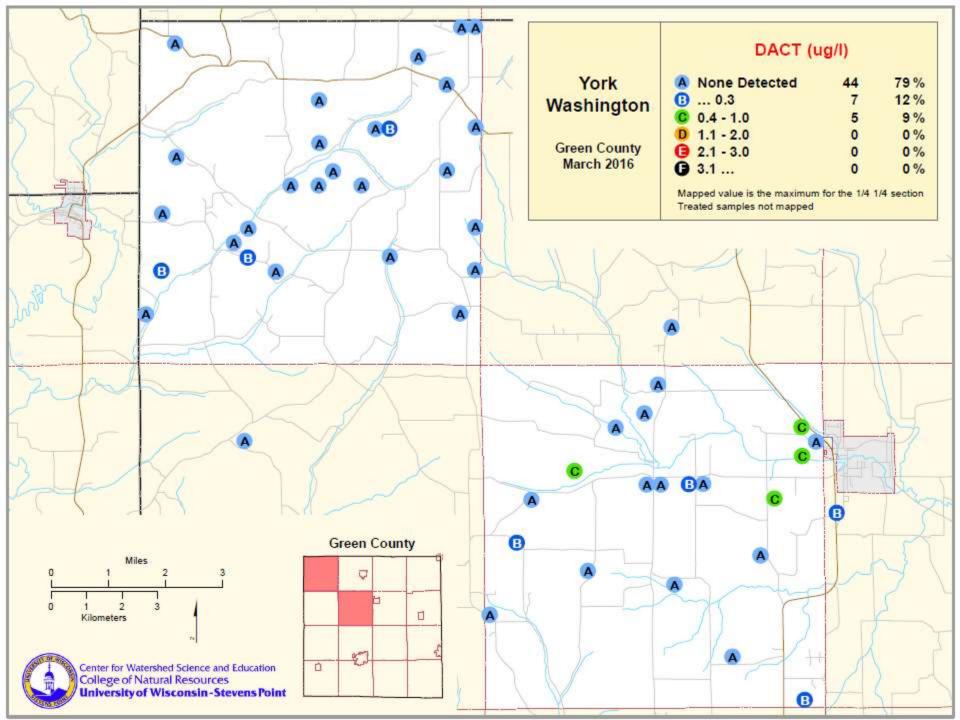

Improving water quality

Long-term improvements

Eliminate sources of contamination

Short-term improvements

- Repair or replace existing well
- Connect to public water supply or develop community water system
- Purchase bottled water for drinking and cooking
- Install a water treatment device
 - Often the most convenient and cost effective solution

understanding water treatment

Advantages:

- Reduce level of contaminants and other impurities
- + Improve taste, color and odor

o Disadvantages:

- Require routine maintenance.
- Can require large amounts of energy.
- Testing is often the only way to know it is functioning properly for most health related contaminants.


o Cautions:

- Treatment methods often selective for certain contaminants
- Multiple treatment units may be necessary
- Treatment may also remove beneficial elements from water in the process.



Where do you go from here: Recommended next steps

- Test well annually for bacteria, or if water changes color or clarity.
- If levels are elevated, test again in 15 months for nitrate.
- If you haven't checked for arsenic consider testing.
- If arsenic was present, test again in 15 months to see if levels have changed significantly.

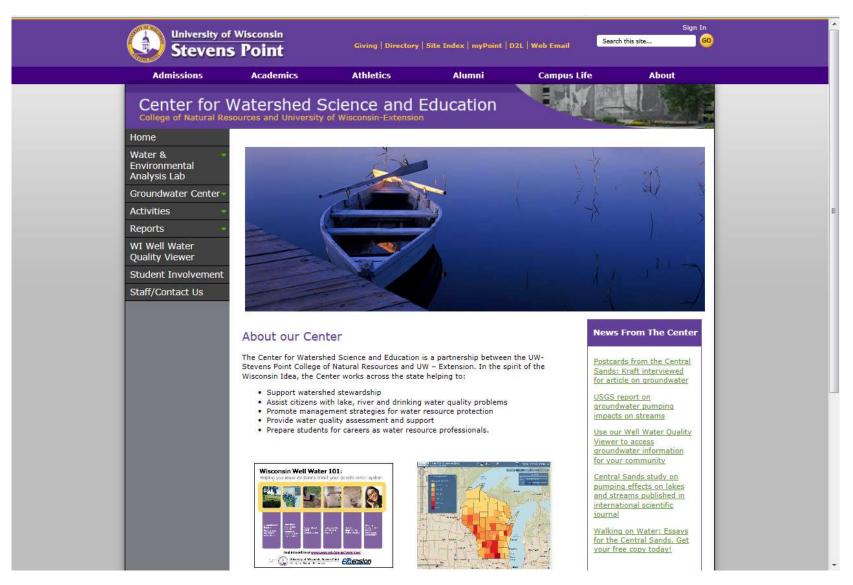

www.uwsp.edu/cnr-ap/watershed



Thanks to you and the following for helping sponsor this program:

- Towns of Washington and York
- Green County UW-Extension Office



Through the University of Wisconsin-Extension, all Wisconsin people can access University resources and engage in lifelong learning, wherever they live and work.